

Please Review Carefully

Wyckomar UV Systems with Eco Ballast

Your new UV system is supplied with the Wyckomar Eco Ballast.

When installing the ballast to the purifier, you must first connect the 4-pin lamp connector to the lamp and then plug the power cord into the wall receptacle.

If there is ever a power outage, the ballast may sound an alarm when the power comes back on. In that case, please disconnect the power cord from the wall, wait for 30 seconds, then plug the cord back in.

This ballast has a count-up feature for the display of the total runtime (in days) of the UV lamp. A replacement UV lamp will have guaranteed germicidal output for 365 days (1 year). Replace the UV lamp with a new one at each interval of 365 on the display, i.e. 365, 730, 1095 etc.



Please Review Carefully

Wyckomar UV Systems with Eco Ballast

Your new UV system is supplied with the Wyckomar Eco Ballast.

When installing the ballast to the purifier, you must first connect the 4-pin lamp connector to the lamp and then plug the power cord into the wall receptacle.

If there is ever a power outage, the ballast may sound an alarm when the power comes back on. In that case, please disconnect the power cord from the wall, wait for 30 seconds, then plug the cord back in.

This ballast has a count-up feature for the display of the total runtime (in days) of the UV lamp. A replacement UV lamp will have guaranteed germicidal output for 365 days (1 year). Replace the UV lamp with a new one at each interval of 365 on the display, i.e. 365, 730, 1095 etc.

